

MANUFACTURING
NUMBERS:

9100700
9100710
9100720



Antunes Foodservice Equipment
DIVISION OF A.J. ANTUNES & CO.

A BRAND OF A.J. ANTUNES & CO.
roundup
ANTUNES FOODSERVICE EQUIPMENT®

VARIETY STEAMER

Models VS-350



P/N 1010745 Rev. G 03/06



Owner's Manual

TABLE OF CONTENTS

| | | | |
|--|----------|---|-------------------|
| Owner Information | 2 | Operation..... | 10 |
| General..... | 2 | Operator Controls | 10 |
| Warranty Information | 2 | Operating Instructions | 11 |
| Service/Technical Assistance | 3 | Programming | 12 |
| Important Safety Information | 4 | General Programming | 12 |
| Electrical Cord & Plug Configurations | 6 | Factory Settings..... | 12 |
| Shipping Weight | 6 | Programming the Unit | 12 |
| Electrical Ratings..... | 6 | Maintenance..... | 14 |
| Specifications | 6 | Daily Cleaning | 14 |
| Dimensions | 6 | Monthly: Cleaning the Steam Generator | 14 |
| Model Designation..... | 6 | Checking and Cleaning the Water Strainer Monthly..... | 16 |
| Installation..... | 7 | Technical Theory of Operation | 18 |
| Unpacking..... | 7 | Troubleshooting | 19 |
| Equipment Setup | 7 | Wiring Diagram | 21 |
| Water Pressure Regulator Installation Instructions ... | 7 | Replacement Parts | 22 |
| Drain | 8 | LIMITED WARRANTY | Back Cover |
| Electrical | 8 | | |
| Steaming Guide | 9 | | |

OWNER INFORMATION

General

The Variety Steamer produces steam using plain tap water for quick heating and reconstituting of food items. Simple push-button action delivers a fully adjustable impulse of steam. Because the amount of steam is consistent, it removes the guesswork and produces a uniform finished product from one operator to the next.

This manual provides the safety, installation and operating procedures for the Variety Steamer. We recommend that all information contained in this manual be read prior to installing and operating the unit.

Your Variety Steamer is manufactured from the finest materials available and is assembled to Roundup's strict quality standards. This unit has been tested at the factory to ensure dependable trouble-free operation.

Warranty Information

Please read the full text of the Limited Warranty in this manual.

If the unit arrives damaged, contact the carrier immediately and file a damage claim with them. Save all packing materials when filing a claim. Freight damage claims are the responsibility of the purchaser and **are not** covered under warranty.

The warranty **does not extend to:**

- Damages caused in shipment or damage as result of improper use.
- Installation of electrical service.
- Normal maintenance as outlined in this manual.
- Malfunction resulting from improper maintenance.
- Damage caused by abuse or careless handling.
- Damage from moisture into electrical components
- Damage from tampering with, removal of, or changing any preset control or safety device.

IMPORTANT! Keep these instructions for future reference. If the unit changes ownership, be sure this manual accompanies the equipment.

OWNER INFORMATION (continued)**Service/Technical Assistance**

If you experience any problems with the installation or operation of your unit, contact your local Roundup Authorized Service Agency. They can be found in the service agency directory packaged with the equipment.

Fill in the information below and have it handy when calling your authorized service agency for assistance. The serial number is on the specification plate located on the rear of the unit.

Purchased From: _____

Date of Purchase: _____

Model No.: _____

Serial No.: _____

Mfg. No.: _____

Refer to the service agency directory and fill in the information below:

Authorized Service Agency

Name: _____

Phone No.: _____

Address: _____

Use only genuine Roundup replacement parts in this unit. Use of replacement parts other than those supplied by the manufacturer will void the warranty. Your Authorized Service Agency has been factory trained and has a complete supply of parts for this unit.

You may also contact the factory at **1-877-392-7854** or **630-784-1000** if you have trouble locating your local authorized service agency.

IMPORTANT

A.J. Antunes & Co. reserves the right to change specifications and product design without notice. Such revisions do not entitle the buyer to corresponding changes, improvements, additions or replacements for previously purchased equipment.

IMPORTANT SAFETY INFORMATION

Throughout this manual, you will find the following safety words and symbols that signify important safety issues with regards to operating or maintaining your Variety Steamer.

WARNING

GENERAL WARNING. Indicates information important to the proper operation of the equipment. Failure to observe may result in damage to the equipment and/or severe bodily injury or death.

WARNING

ELECTRICAL WARNING. Indicates information relating to possible shock hazard. Failure to observe may result in damage to the equipment and/or severe bodily injury or death.

CAUTION

GENERAL CAUTION. Indicates information important to the proper operation of the equipment. Failure to observe may result in damage to the equipment.

WARNING

HOT SURFACE WARNING. Indicates information important to the handling of equipment and parts. Failure to observe caution could result in personal injury.

In addition to the warnings and cautions in this manual, use the following guidelines for safe operation of the unit.

- Read all instructions before using equipment.
- For your safety, the equipment is furnished with a properly grounded cord connector. Do not attempt to defeat the grounded connector.
- Install or locate the equipment only for its intended use as described in this manual. Do not use corrosive chemicals in this equipment.
- Do not operate this equipment if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- This equipment should be serviced by qualified personnel only. Contact the nearest Authorized Service Agency for adjustment or repair.
- Do not block or cover any openings on the unit.
- Do not immerse cord or plug in water.
- Keep cord away from heated surfaces.
- Do not allow cord to hang over edge of table or counter.

The following warnings and cautions appear throughout this manual and should be carefully observed.

- Turn the unit off, disconnect the power source, and allow unit to cool down before performing any service or maintenance on the unit.
- The procedures in this chapter may include the use of chemical products. These chemical products will be highlighted with bold face letters followed by the abbreviated HCS (Hazard Communication Standard). See Hazard Communication Standard manual for the appropriate Material Safety Data Sheets (MSDS).
- The equipment should be grounded according to local electrical codes to prevent the possibility of electrical shock. It requires a grounded receptacle with separate electrical lines, protected by fuses or circuit breaker of the proper rating.
- All electrical connections must be in accordance with local electrical codes and any other applicable codes.

IMPORTANT SAFETY INFORMATION (continued)

- **WARNING ELECTRICAL SHOCK HAZARD. FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.**
 - Electrical ground is required on this appliance.
 - Do not modify the power supply cord plug. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.
 - Do not use an extension cord with this appliance.
 - Check with a qualified electrician if you are in doubt as to whether the appliance is properly grounded.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person.
- This equipment is to be installed to comply with the basic plumbing code of the Building Officials and Code Administrators, Inc. (BOCA) and the Food Service Sanitation Manual of the Food and Drug Administration (FDA).
- Water pressure must not exceed 30 psi (2.1 kg/cm² or 207 kPa). Higher water pressures may cause poor performance, flooding. To reduce water pressure, install a water pressure regulator and set water pressure to 20 -25 psi (1.4 - 1.7 kg/cm² or 138 - 172 kPa).
- Do not clean this appliance with a water jet.
- Do not use a sanitizing solution or abrasive materials. The use of these may cause damage to the stainless steel finish.
- To ensure proper steaming characteristics, some calcium/mineral deposits must be present on the generator surface. If, during cleaning, the surface does become free of deposits, add plain tap water to the surface and allow it to boil off. This will ensure proper steaming characteristics by creating a thin layer of calcium/mineral deposits on the surface.
- Chlorides or phosphates in cleansing agents (e.g. bleach, sanitizers, degreasers, or detergents) could cause permanent damage to stainless steel equipment. The damage is usually in the form of discoloration, dulling of metal surface finish, pits, voids, holes or cracks. This damage is permanent and not covered by warranty:

The following tips are recommended for maintenance of your stainless steel equipment,

- Always use soft, damp cloth for cleaning, rinse with clear water and wipe dry. When required, always rub in direction of metal polish lines.
- Routine cleaning should be done daily using soap, ammonia detergent and water.
- Stains and spots should be sponged using a vinegar solution as required.
- Finger marks and smears should be rubbed off using soap and water.
- Hard water spots should be sponged using a vinegar solution.

SPECIFICATIONS

Electrical Ratings

| Model and Mfg # | Voltage | Watts | Amps | Hertz |
|---------------------|----------|-----------|---------|-------|
| VS-350CS 9100700 | 208 -240 | 5000-6693 | 24-27.9 | 50/60 |
| VS-350HJ 9100710 | 230 | 5000 | 21.7 | 50/60 |
| VS-350HC 9100720 | 230 | 3500 | 15.2 | 50/60 |

Electrical Cord & Plug Configurations

| Letter Code | Description | Configuration |
|-------------|---|---------------|
| C | Commercial Cord | |
| H | Harmonized Cord | |
| ** (H) C | CEE 7/7, 16 Amp., 250 VAC (Assembly Only). | |
| * (C) S | L6-30P, 30 Amp., 250 VAC., Straight Twist Lock. | |
| ** (H) J | IEC-309, 32 Amp., 250 VAC., Pin & Sleeve | |

* Indicates that the Plug comes with a Commercial Cord

** Indicates that the Plug comes with a Harmonized Cord

⚠ WARNING ⚠

ELECTRICAL SHOCK HAZARD.
FAILURE TO FOLLOW THE INSTRUCTIONS IN THIS MANUAL COULD RESULT IN SERIOUS INJURY OR DEATH.

- Electrical ground is required on this appliance.
- Do not modify the power supply cord plug. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.
- Do not use an extension cord with this appliance.
- Check with a qualified electrician if you are in doubt as to whether the appliance is properly grounded.



⚠ CAUTION ⚠

All electrical connections must be in accordance with local electrical codes and any other applicable codes.

Shipping Weight

63 lbs. (28 kg)

Dimensions

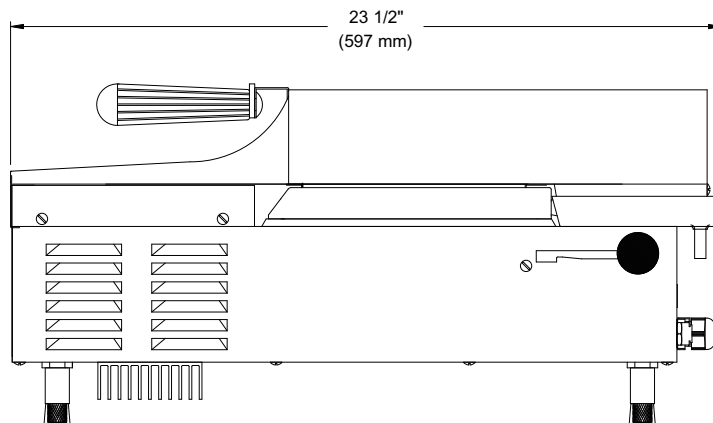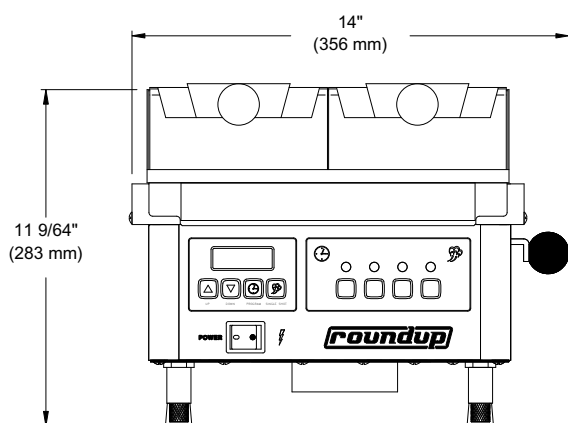

INSTALLATION

Unpacking

1. Remove unit and all packing materials from shipping carton.
2. The unit should contain the following:
 - Owner's Manual
 - Authorized Service Agency Directory
 - Petro Gel Tube
 - Inlet Hose and Strainer Assembly
 - Black Drain Tubing

NOTE: If any parts are missing or damaged, contact Antunes Technical Service IMMEDIATELY at 1-877-392-7854 or 630-784-1000.

3. Remove all packing materials and protective coverings from the unit.
4. Remove and wash all removable parts in soap and water. Rinse with clean hot water and allow to air dry.

NOTE: The steam generator surface (Figure 8) will have a thin white coating of artificial lime deposits. This coating is necessary for steaming characteristics and should not be removed. Refer to the Maintenance section of this manual for more information.

5. Wipe all surfaces of the unit with a hot damp cloth.

NOTE: Do not use a dripping wet cloth. Wring out before use.

6. Re-install all removed parts.

Equipment Setup

GENERAL

When placing the unit into service, pay attention to the safety guidelines listed in the Important Safety Information section of this manual.

PLUMBING

NOTE: Variety Steamer models are designed to use cold tap water at 20-25 psi (1.4-1.7 kg/cm² or 138-172 kPa).

Your VS-350 requires direct water hookup. An Inlet Hose and Strainer assembly (Figure 2 and 2A) is supplied with the unit. A water pressure regulator (P/N 7000235 (Figure 2A) to feed 2 steamers or P/N 7000314 (Figure 2) to feed 1 steamer), must first be installed.

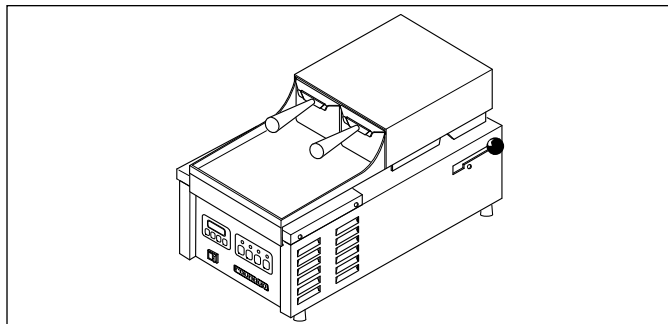


Figure 1. Variety Steamer

⚠ CAUTION ⚠

This equipment is to be installed to comply with the basic plumbing code of the Building Officials and Code Administrators, Inc. (BOCA) and the Food Service Sanitation Manual of the Food and Drug Administration (FDA).

Water Pressure Regulator Installation Instructions

1. Install the regulator assembly to the steamer as shown in Figure 2 and 2A.
2. Open the shut off valve to allow water flow to the Regulator. Ensure that the steamer pressure regulator is set at 20-25 psi. If not, confirm that incoming water pressure is above 25 psi and, if so, adjust the regulator by pulling softly on the knob and turning until the gauge reads desired pressure. Push in the knob to lock.

NOTE: If the pressure was adjusted, the existing pressure must be relieved in order to register the new set pressure

3. Push the "white" plastic tip on each 1/4" elbow Quick Disconnect (Figure 2 and 2A) and hold for a few seconds to purge out air in the line and allow water to flow freely into a bucket with a steady stream.
4. Push each 1/4" elbow Quick Disconnect into the rear of the steamer(s) until a "click" is heard. Turn on the steamers and allow 20 minutes to warm up. Cycle the units 3 times and check the pressure regulator setting. If there is a change, adjust it again to read 20-25 psi and then push the knob in to lock. The unit is ready for use.

⚠ CAUTION ⚠

Water pressure must not exceed 30 psi (2.1 kg/cm² or 207 kPa). Higher water pressures may cause poor performance or flooding. To reduce water pressure, install a water pressure regulator, and set water pressure to 20-25 psi (1.4-1.7 kg/cm² or 138-172 kPa).

Drain

Connect the black drain tube (Figure 8) to the drip tray by pressing the tube onto the drain pipe at the bottom of the drip tray. Place the other end of the tube in a drain or collection pan.

Electrical

1. Place the unit on a sturdy, level table or other work surface. Be sure the Rocker Switch (Power On/Off) is in the OFF position before proceeding.
2. Connect the unit to the power supply.

⚠ CAUTION ⚠

All electrical connections must be in accordance with local electrical codes and any other applicable codes.

⚠ WARNING ⚠

ELECTRICAL SHOCK HAZARD.

FAILURE TO FOLLOW THE INSTRUCTIONS IN THIS MANUAL COULD RESULT IN SERIOUS INJURY OR DEATH.

- Electrical ground is required on this appliance.
- Do not modify the power supply cord plug. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.
- Do not use an extension cord with this appliance.
- The unit should be grounded according to local electrical codes to prevent the possibility of electrical shock. It requires a grounded receptacle with separate electrical lines, protected by fuses or circuit breaker of the proper rating.
- Check with a qualified electrician if you are in doubt as to whether the appliance is properly grounded.

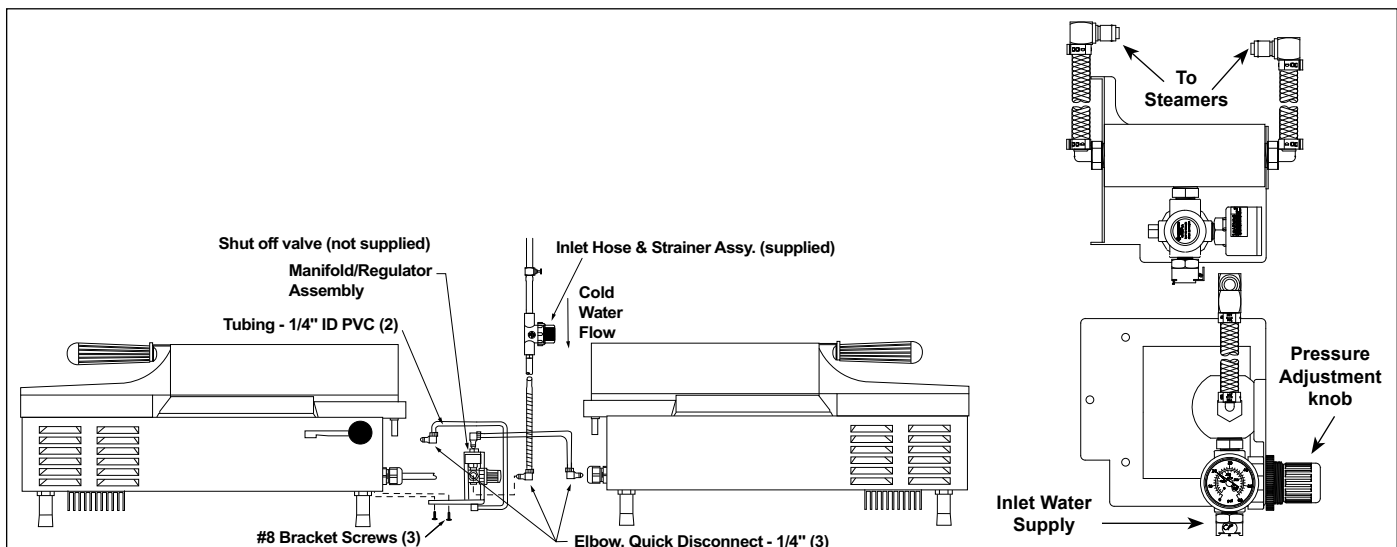


Figure 2A. Connecting Dual Manifold Water Pressure Regulator (P/N 7000235)

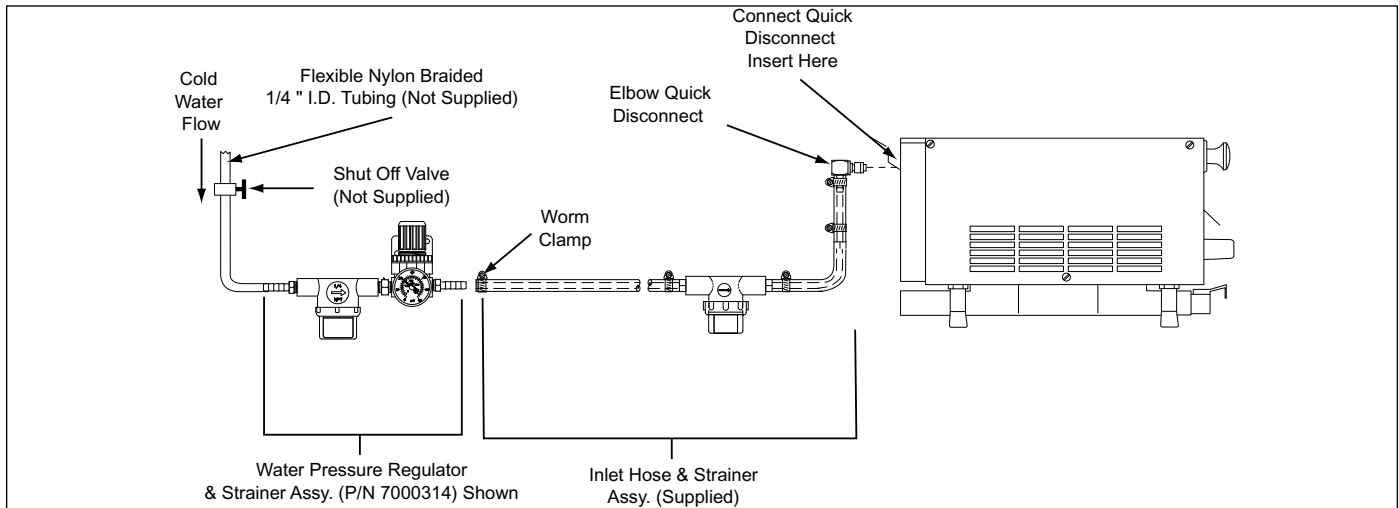


Figure 2. Connecting Single Water Pressure Regulator

STEAMING GUIDE

The Variety Steamer makes it possible to expand a menu with just one piece of equipment. The Variety Steamer produces a super-heated dry steam. This steam penetrates the product until the product's temperature matches the steam temperature. The guide below is an approximation of the number of steam shots and the time required to cook the food item. Steam times may vary based on the state and quantity of the food product.

| PRODUCT DESCRIPTION | DIAL SETTING | TIME | PRODUCT DESCRIPTION | DIAL SETTING | TIME |
|------------------------|---------------|----------------------|---------------------|---------------|-----------------------|
| <i>PreCooked Items</i> | <i>VS-200</i> | <i>VS-350</i> | <i>Frozen Items</i> | <i>VS-200</i> | <i>VS-350</i> |
| Spaghetti | 3 | 25 seconds | Mixed Vegetables | 6 | 55 seconds |
| Rice | 3 | 25 seconds | Spaghetti | 6 | 55 seconds |
| Egg Noodles | 3 | 25 seconds | Ravioli | 12 | 1 minute, 55 seconds |
| Macaroni | 3 | 25 seconds | Tortellini | 12 | 1 minute, 55 seconds |
| Ravioli | 6 | 55 seconds | <i>Other</i> | | |
| Tortellini | 6 | 55 seconds | Poached Eggs | 18 | 2 minutes, 45 seconds |
| Roast Beef, Sliced | 2 | 15 seconds | Bread Products | 1-2 | 5-15 seconds |
| Shrimp | 4 | 35 seconds | | | |
| Tortilla Shell | 1 | 5 seconds | | | |
| <i>Fresh Items</i> | | | | | |
| Shrimp | 8 | 1 minute, 15 seconds | | | |
| Broccoli | 10 | 1 minute, 35 seconds | | | |

Products starting temperature is from a refrigerated state unless otherwise stated.
This is also based on a full 20 ounce basket or two individual 10 ounce baskets.

OPERATION

Operator Controls

ROCKER SWITCH (POWER ON/OFF)

When the Rocker Switch (Power On/OFF) is in the ON position, the Control Board is activated. If the generator temperature is below the factory preset setpoint, power is applied to the generator until the setpoint temperature is reached. The generator is constantly monitored and power is regulated to maintain the temperature setpoint.

MENU BUTTONS

When any menu button is pressed and released, power is supplied to the solenoid, the solenoid operates, and water sprays onto the heated steam generator surface. The water flashes immediately into live steam to heat the product.

One of two operational modes can be used: Single Shot or Timed Cycle

SINGLE SHOT

The Single Shot button (Figure 3) is pressed and released to initiate a single shot. The Control Board applies power to the solenoid and a single “shot” of steam occurs.

TIMED CYCLE

The desired timed steaming cycle (up to 99 minutes and 59 seconds) is selected by pressing and releasing any of the four menu buttons (Figure 3). The main Control Board applies power to the solenoid at regular intervals for the duration of the displayed cycle time. The display counts down to zero when the cycle is complete, then reverts back to the original programmed cycle time and the unit is ready for the next cycle.

IMPORTANT: Your steamer is factory programmed for the following (on each of the 4 menu channels):

- Total Cycle Time = 10 seconds [00:10]
(Range: 1 second to 99 minutes and 59 seconds)
- Shot Interval Rate (RATE) = 5 seconds [00:05]
(Range: 1 second to 5 minutes and 59 seconds)
- Steam Shot Time (SHOT) = 0.70 second [00:70]
(Range: 0.10 second to 2.50 seconds)

This converts approximately 3/4 oz. (25 milliliters) of water to steam every 5 seconds for a 10 second steaming cycle. To change any of these settings refer to the Programming section of this manual.

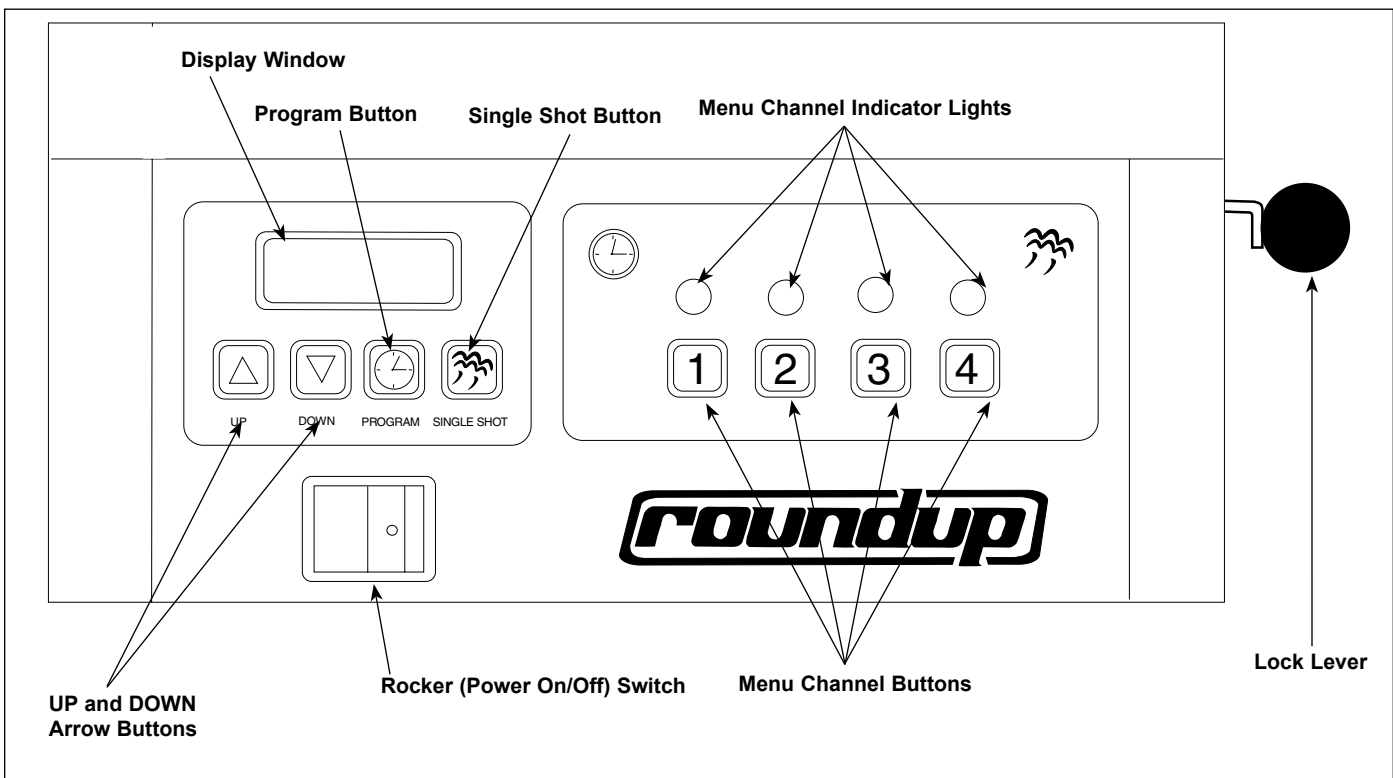


Figure 3. Operator Controls

UP & DOWN ARROW BUTTONS

The actual generator temperature can be viewed by depressing the UP arrow button (Figure 3) at any time. The arrow buttons are used with the other buttons to program the unit (see the Programming section of this manual for more information).

LOCK LEVER

When in the full forward (towards operator) position, the lock lever (Figure 8) secures the generator manifold in position on top of the unit. Moving the lock lever to the full rearward position unlocks the generator manifold, allowing it to be removed for cleaning or servicing.

NOTE: Do NOT force the lever into position.

HI-LIMIT RESET THERMOSTAT

If the generator overheats for any reason, the Hi-Limit Thermostat opens (trips) and cuts off power to the generator. This can be reset by turning the unit off, unplug the power cord, and allow the unit to cool for 45 minutes. Remove the Main Housing Cover and press the Hi-Limit's red reset button (Figure 8). If the Hi-Limit Thermostat requires continuous resetting, contact your Authorized Service Agency

NOTE: Units manufactured on or before October 2002 have an externally resettable Hi-Limit. To reset it, remove the black protective cap located underneath the front of the unit and press the button fully. Reinstall the cap after resetting the unit.

Operating Instructions

1. Turn the unit on and allow it to preheat for approximately 30 minutes.

IMPORTANT: Do not push any of the menu buttons during warm-up. The word "LOW" flashes on the display to indicate the unit is not up to operating temperature. When the cycle time is displayed, the unit may be operated.

2. Remove baskets and place desired product into baskets. Insert baskets into the steamer.
3. **Single Shot:** Press and release the Single Shot button and wait 10 seconds for the steam to penetrate the product.

Timed Cycle: Momentarily pressing any one of the four channel buttons will begin a steaming cycle. During the cycle, the display will count down to zero ending with an audible tone to signal the completion of the cycle.

NOTE: Experiment by steaming product at differ-

ent settings until correct cycle for that product is found.

4. When the cycle is complete, remove and empty the basket(s). At the end of the serving day or shift, turn off the unit and allow it to cool before performing the daily Cleaning procedures in the Maintenance section of this manual.

⚠ WARNING ⚠

To avoid injury, be careful when pulling basket assembly out from unit. Be sure to allow steam to escape before putting hands or face over the steamer.

Steaming Tips

Listed below are some samples of products that have been tested in the *Variety Steamer*. Recommended settings are listed following each product. Refer to the Programming section of this manual to setup the steamer for any of these items (results may vary).

Experiment with your products and different steaming times—a little more or less steam could change the appearance and/or flavor.

Pre-cooked pasta is easily reconstituted, and gives you a hot product without the wetness of the normal "dip" method. **CYC** = 00.20, **RATE** = 00.05, **SHOT** = 00.55

If you serve melted cheese on sandwiches, steam is the perfect way to melt cheese. **CYC** = 00.10, **RATE** = 00.05, **SHOT** = 00.40

A steamed bun (which takes about 10-15 seconds) says "Hot Sandwich" to your customer. **CYC** = 00.10, **RATE** = 00.05, **SHOT** = 00.70

Vegetables, rice, and bread products can be reconstituted by steaming before serving which reduces waste. **CYC** = 00.20, **RATE** = 00.05, **SHOT** = 00.55

Dinner rolls, muffins, even tortillas can be heated completely and held without drying out the product.

Use a low plate or pan when steaming to allow full steam penetration and shorter cooking times. Condensation inside the steamer is normal, but excess moisture indicates too much water is being used. See the Programming and Equipment Setup areas of this manual.


Heat meat and bread products apart from each other, then combine in a sandwich. This will keep the meat juices from soaking the bread. Finish off a special meal with a steamed hand towel—hot without excessive moisture.

PROGRAMMING


Before starting initial programming, there are three items that should be verified.

- * Check/change the setpoint temperature of the generator (it is recommended that the generator be set at 375°F (191°C).
- * Change the display from Fahrenheit (F) to Celsius (C) or vice versa.
- * Verify the generator temperature after a 30 minute pre-heat time.


Listed below are the steps to follow for the recommendations listed above.

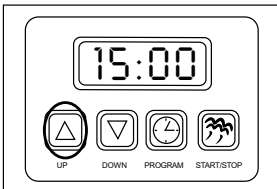

To verify the actual generator temperature, press and hold the UP arrow button. The unit will display the actual generator temperature.

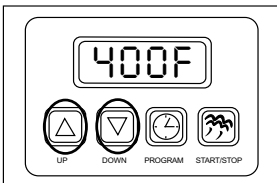

To verify or change the generator setpoint temperature, press and hold the UP and DOWN arrow buttons simultaneously for three seconds. Then, raise or lower the temperature by depressing the UP or DOWN arrow buttons. Release the buttons when the desired temperature is reached.

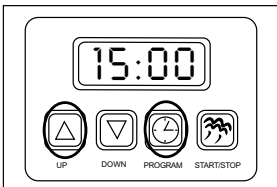

To Change the display from Fahrenheit (F) to Celsius (C), press and hold the UP arrow and the PROGRAM buttons simultaneously for three seconds. Repeat the process to reverse.

General Programming

CYC (Total Cycle Time) refers to the total amount of cooking time set for the product (Figure 4).

RATE (Shot Interval Time) is the time set between each shot of steam during a complete cycle (Figure 5).

SHOT (Steam Shot Time) is used to adjust the water volume used during each solenoid operation (shot of steam) (Figure 6).

The amount of steam produced by your unit depends on the amount of water sprayed onto the steam generator surface. Flooding of the generator may occur if the SHOT setting is too high or if the RATE setting is too low.

To prevent this from occurring, the RATE (Shot Interval Time) should be increased to allow more time for generator heat recovery, and the SHOT (Steam Shot Time) can be decreased to reduce the water volume.

Adjustments should be made to both values to determine the optimum settings for your cooking needs.

Factory Settings

The VS-350 is factory programmed for the following values for each of the 4 menu channels:

CYC = [00:10] 10 seconds
(Range: 1 second to 99 minutes 59 seconds)

RATE = [00:05] 5 seconds (**recommended**)
(Range: 1 second to 5 minutes 59 seconds)

SHOT = [00:70] 0.70 seconds (**recommended**)
(Range: 0.10 second to 2.50 seconds)

These settings deliver approximately 3/4 oz. (25 milliliters) of water every 5 seconds for a 10 second cooking time. Changes may be made to any of these settings. However, for optimum performance, settings should remain as shown above.

To restore the factory settings:

1. Turn the unit off. **Press and hold** the Program and Single Shot buttons.
2. Turn the unit on while still holding these buttons.
3. Release the buttons as soon as the unit stops beeping.

Programming the Unit

NOTE: CYC, RATE, and SHOT are sequential operations per channel for all programming (you must perform all steps for CYC and RATE to change SHOT).

NOTE: CYC, RATE, and SHOT are only displayed momentarily during the programming sequence when the PROGRAM button is pressed.

PROGRAMMING (continued)

CYC (Total Cycle Time)

1. Turn the Rocker Switch (power On/Off) to ON (Figure 3). Allow 30 minutes to preheat the unit.

NOTE: During preheating, the display will flash "LOW". When unit reaches operating temperature, the display shows the factory preprogrammed (default) time in minutes/seconds (Figure 7) and the active channel indicator light will be on.

2. Press the Program button to change the control from OPERATION to PROGRAM mode. CYC will appear in the display for a moment. Select a Menu Channel (1 thru 4), making the selected channel the active channel.

NOTE: If no change is made withing 10 seconds at any time during the programming process, all changes made up to that point are stored in memory and the control reverts to OPERATION mode.

3. Press the UP or DOWN arrow buttons to change the total cycle time in minutes (Figure 7).
4. Press the PROGRAM button again, then use the UP or DOWN arrow buttons to change the total cycle time in seconds.
5. When finished, either:
 - a.) Press the selected menu channel button to store the changes; pressing this again will start the steam cycle.

OR

 - b.) Select another menu channel for change and repeat steps 3 & 4. Changes made to previous channels will automatically be stored.

RATE (Shot Interval Time)

6. While in Program mode (press the PROGRAM button if not in this mode), press both the UP and DOWN arrow buttons simultaneously. RATE will appear in the display for a moment (Figure 5).
7. Use the UP or DOWN arrow buttons to change the RATE setting in seconds.
8. Press the PROGRAM button again, then use the UP or DOWN arrow buttons to change the rate time in minutes.

SHOT (Steam Shot Time)

9. Press the PROGRAM button again and SHOT will appear in the display for a moment (Figure 6).

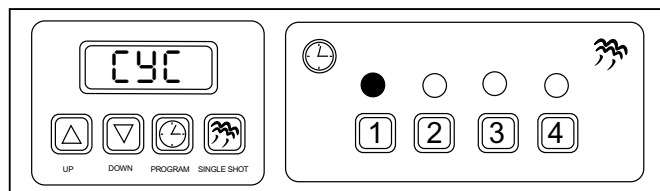


Figure 4. CYC Mode on Menu 1

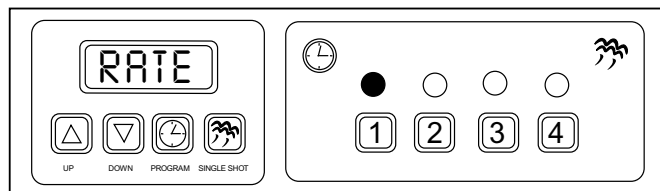


Figure 5. RATE Mode on Menu 1

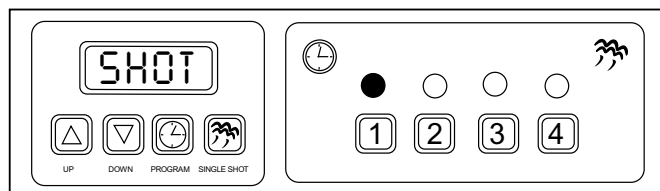


Figure 6. SHOT Mode on Menu 1

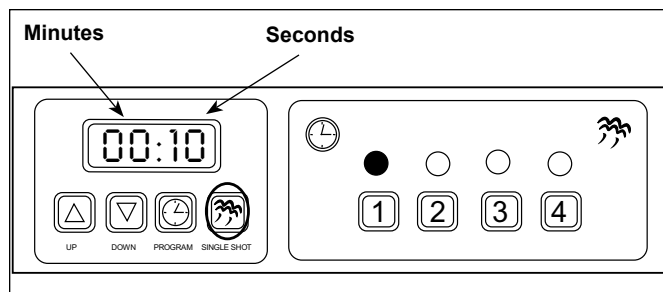


Figure 7. Programming Mode SINGLE SHOT Button Used for Saving All Changed Settings.

10. Use the UP or DOWN arrow buttons to increase or decrease the time.
11. Press the selected channel button to store the changes (Figure 6) or press another channel button to store the changes and select a new channel.
12. Repeat steps 1 - 11 for any of the other Menu Channels.

NOTE: The SINGLE SHOT button may be pressed at anytime during programming to store any changes made and execute a fixed single shot of 0.70 second.

MAINTENANCE

⚠ WARNING ⚠

Turn the unit off, disconnect the power source, and allow the unit to cool down before performing any service or maintenance on the unit.

⚠ WARNING ⚠

Refer to the instructions for cleaning and handling the unit within the Important Safety Information section of this manual.

⚠ CAUTION ⚠

Do not use a sanitizing solution or abrasive materials. The use of these may cause damage to the stainless steel finish.

⚠ CAUTION ⚠

If a chemical cleaner is used, be sure it is safe to use on cast aluminum. Observe all precautions and warnings on product label.

⚠ CAUTION ⚠

Unplug power cord before moving and servicing this appliance.

⚠ CAUTION ⚠

Failure to regularly and/or properly clean this equipment may damage it or cause the user bodily injury.

Daily Cleaning

NOTE: Frequency of cleaning is determined by water conditions, usage and water filter systems.

1. Turn the unit off and unplug the power cord. Allow the unit to cool for approximately 30 minutes.
2. Check the rear water quick disconnect fitting and all hose clamp connections for leakage. If leakage is apparent, tighten all clamps or replace part(s) if required.
3. Remove baskets, top cover housing assembly, drip tray, and wash in hot, soapy water. Then, rinse these parts and allow them to air dry.
4. Remove the Black Manifold plate by slightly lifting and sliding the Locking lever (on the right side of the unit) towards the rear, carefully remove the plate and remove the large black O-ring from the plate. Remove the diffuser plate and then remove the spray tube by carefully lifting the loose end and gently twisting and pulling it out of

the steam generator hole. **Take a suitable 1/16" punching tool (such as a paperclip) and fully insert it through all 18 orifices in the black manifold as well as through the 10 orifices in the spray tube.** This assures the orifices are not obstructed with debris. Wash all items in hot, soapy water. Rinse these items and allow them to air dry.

5. Reinstall the spray tube into the steam generator hole and reinstall diffuser plate.
6. Lightly apply some Petrol Gel (included) onto the large black O-ring and reinstall the O-ring onto the manifold plate (this allows the manifold plate to seat easily onto the steam generator). Hold the manifold plate up to a light source and verify that light is visible through all the orifices. If so, seat the manifold fully onto the generator and pull the locking lever forward to lock the plate.
7. Check that the water pressure regulator is correctly set to 20 PSI (1.4 Kg/cm² or 138 kPa).
8. Reinstall all parts and accessories.

Monthly: Cleaning the Steam Generator

Your steamer utilizes an open steam generator. Water sprayed onto the generator surface flashes into steam immediately, but the minerals in the water do not steam, they stay on the generator surface. **A small amount of calcium/mineral deposits are needed for proper operation**, but a build-up of excessive calcium/mineral deposits causes poor steaming efficiency, excessive moisture (wet steam) and will eventually affect the steaming action completely.

1. Turn the Rocker Switch (power On/Off) to OFF. Unplug the power cord and allow the unit to cool down before proceeding.
2. Perform the Daily Cleaning procedures, but **DO NOT** reassemble the unit.
3. With the unit cool, use a **NON ABRASIVE** brass brush and/or scraper to loosen and remove the excessive calcium/mineral deposits from the generator surface (Figure 8). Wipe the generator with a clean damp cloth. Reassemble the unit.

NOTE: If deposits are still excessive and/or difficult to remove, see Step 4.

MAINTENANCE (continued)

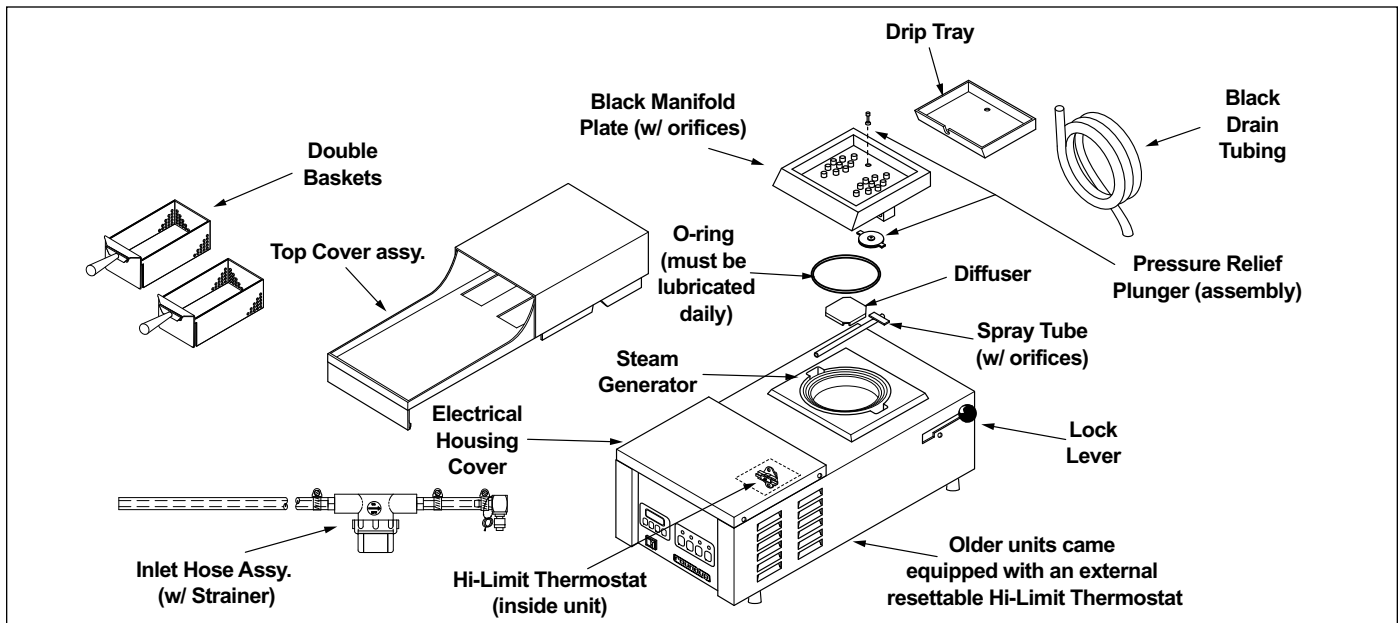


Figure 8. Variety Steamer Components & Accessories

- Wearing protective eyewear and gloves, pour delimer solution (not supplied) onto the generator surface (Figure 8). Be sure to follow the delimer manufacturer's directions for proper mixture and use.

⚠ CAUTION ⚠

If a chemical cleaner/delimer is used, be sure it is safe to use on cast aluminum. Observe all precautions and warnings on the product label.

- Using a sponge or dry towel, remove the delimer solution from the generator. Then, rinse the generator with clear water.

NOTE: To ensure proper steaming characteristics, some calcium/mineral deposits must be present on the generator surface. If, during cleaning, the surface does become free of calcium/mineral deposits, add plain tap water to the surface and allow it to boil off. This may have to be repeated several times in order to formulate a thin coating of deposits. If unsuccessful, see below.

NOTE: In soft water areas, it may be necessary to add a small amount of lime to the generator surface to "season" it. This will ensure proper steaming characteristics by producing a thin coating of calcium/mineral deposits on the generator surface. Seasoning mixture consists of 3/4 ounces (25ml/25cc) of baking soda, 3/4 ounces (25ml/25cc) of lime and 1 quart (950ml/950cc) of water. Stir mix-

ture and pour 1/4" deep into hot generator. After mixture is converted to steam, the remaining loose powder can be wiped off.

- Plug power cord into electrical outlet
- Turn Rocker Switch (power On/Off) to ON. Allow unit 30 minutes to warm up.
- Use the Single Shot button to cycle unit three separate times to purge remaining delimer from generator.

PRESSURE RELIEF PLUNGER

The Pressure Relief Plunger (Figure 8) protects the equipment and user from any harm that can result if the orifices of the Black Manifold Plate (Figure 8) has not been cleaned according to the Daily Cleaning Procedures in this manual. When the orifices become restricted or clogged, steam pressure builds up within the black manifold plate. This pressure build-up eventually forces the Pressure Relief Plunger to elevate and relieve the pressure, generating a loud "whistling" sound. If at any time this condition should occur, the unit must be cleaned according to the Daily Cleaning Procedures in this manual. Maintenance procedures are not covered by warranty.

NOTE: Be sure that the Plunger Relief Valve is securely mounted to the Plunger Weldment.

MAINTENANCE (continued)

Checking and Cleaning the Water Strainer Monthly

GENERAL

The Water Strainer protects the unit from any foreign debris in the water line that could get into the food, damage the unit's solenoid (causing the unit to leak or flood), or interfere with the equipment's proper and consistent operation (Figure 10).

To ensure proper and consistent steaming results, visually check the water pressure regulator gauge and strainer cup regularly. If the pressure on the gauge has dropped, visually check the clear plastic strainer "cup" and clean out the accumulated debris as follows.

1. Shut off the water supply valve to the unit, unscrew the clear plastic strainer "cup" and carefully remove the mesh strainer screen.

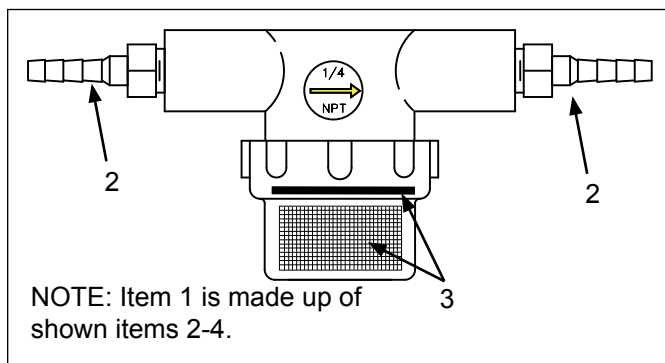


Figure 10. Water Line Strainer Kit

2. Take the strainer cup and mesh strainer to the sink and gently flush all the accumulated debris out of them, be especially careful not to damage the mesh strainer screen.
3. Carefully place the mesh strainer screen into its seat at the bottom of the clear plastic cup and confirm that the orange O-ring is properly seated in its place before screwing the Strainer cup and top back together.
4. Purge the air out of the strainer and tubing by disconnecting the male quick disconnect fitting from the equipment and, over a bucket, pushing its "white" plastic tip in until there is a good water flow.
5. Replace damaged or worn parts as needed.

| Item | Part No. | Description | Qty. |
|------|----------|-----------------------------------|------|
| 1 | 7000333 | Water Line Strainer Kit | 1 |
| 2 | 2040130 | Male Adapter, barbed - 1/4" | 2 |
| 3 | 7000334 | Replacement Screen and O-ring Kit | 1 |
| 4 | 2110104 | Clamp, Worm (Not shown) | 2 |


Diagnostics

The four-channel controller is also equipped with diagnostic features. Listed under each drawing is a brief description of the particular feature. Also contained in the control housing mounted on the control board are diagnostic LED's. They are in three colors and represent the following:


- * **Green (Program):** When lit, indicates factory settings are being set.
- * **Yellow (Audio):** When lit, indicates 10-15 VDC is being supplied to the audio signal. The Audio Signal will sound for 3 seconds.
- * **Red (Heat):** When lit, indicates the unit is calling for heat by supplying 3-5 VDC to the solid state relay. When off, it indicates the heating circuit is satisfied.

- * **Green (Water):** When lit, indicates that 24 VAC is being supplied to open the solenoid.


NOTE: This LED is only lit for approximately one second.

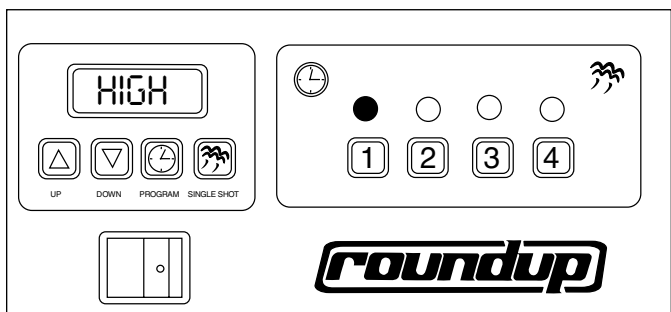

HIGH will be displayed when the generator temperature exceeds the setpoint temperature by 50°F (10°C).

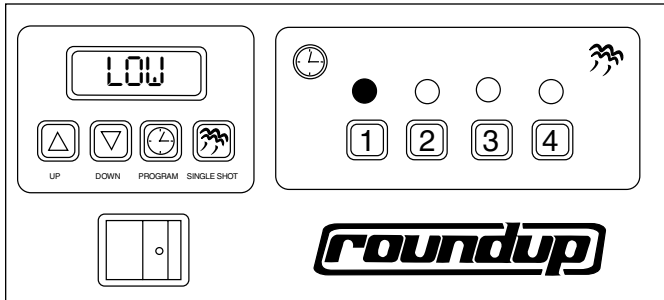

LOW will be displayed until the generator temperature exceeds 250°F (121°C).

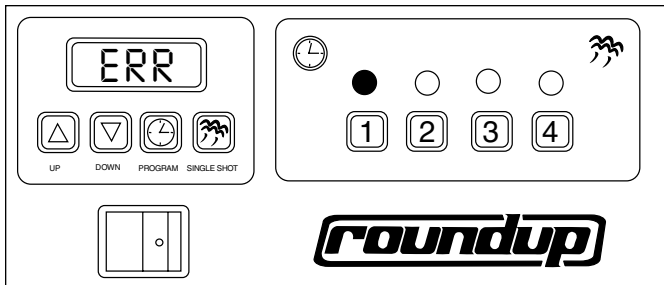


ERR (Error) will be displayed if there is a programming parameters error. If this message appears you will have to clear the current parameters.


To clear the unit's current programming and reset the unit to its factory settings:

1. Turn the unit off.
2. Push the Single Shot and Program buttons simultaneously and, while turning the unit back on, continue to hold them until you hear the Beep Stop.
3. Check the display:
 - If the Display shows "ERR" again, repeat steps 1 through 2. If "ERR" still appears on the display, contact your maintenance person or Authorized Service Agency.
 - If the Display appears normal, try a single shot before attempting to reprogram the unit.


Review the Programming section of this manual and then program the Menu Channel Buttons according to your cooking requirements.

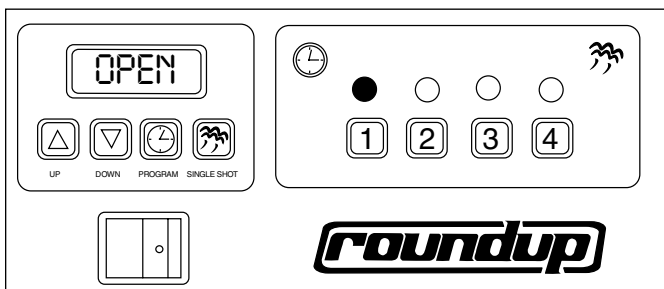

OPEN will be displayed when the thermocouple is "open" or not installed correctly. The unit will not call for heat.

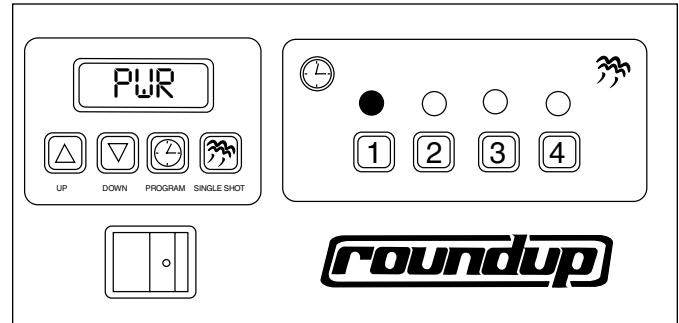

PWR (Power) will be displayed when the supply voltage is lower than 160 Volts AC or above 265 Volts AC.

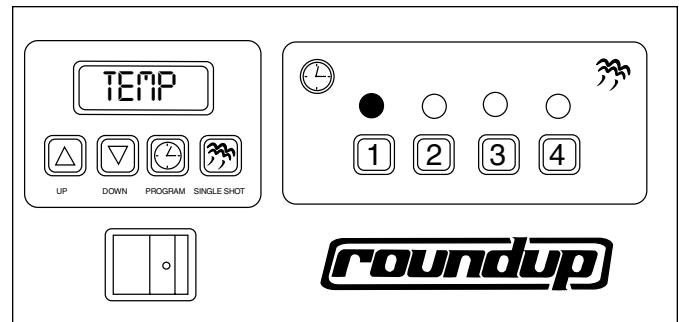

TEMP indicates the control cabinet temperature has exceeded 155°F (68°C) causing the unit to shut down.

The TEMP Display indicates that the control cabinet temperature has exceeded 155°F (68°C). If this occurs, the unit must be turned off for at least 20 minutes so that it can cool off and reset. If this condition occurs again, contact your maintenance person or Authorized Service Agency.

The Control Board monitors the control cabinet ambient temperature and records the highest temperature. Your service technician could find such information very useful when troubleshooting the unit.

To determine the control cabinet's highest temperature since the last reset:

1. Turn the unit OFF.
2. Turn the unit back ON while pressing both the UP and DOWN arrow buttons at the same time.
3. Read the highest control cabinet temperature recorded on the display and release the arrow buttons.
4. Turn the unit OFF again to preserve this record.

To clear/reset this record, press both the UP and DOWN arrow buttons simultaneously (before turning the unit OFF) and the display will show 33°F - indicating that record has been cleared - and then turn the unit OFF.

MAINTENANCE (continued)**Technical Theory of Operation**

When the Rocker Switch (power On/Off) is ON, line voltage flows to the primary side of the step down transformer. The transformer's secondary side supplies 12 and 24 VAC to the Control Board.

Once powered, and provided that the generator's temperature is below the setpoint temperature, the Control Board calls for heat by supplying 3 to 5 VDC to the Solid State Relay terminals 3 (+) 4 (-). Once powered, the Solid State Relay then closes terminals 1 and 2, which allows line voltage to flow to the generator.

As the generator begins to heat up, a type "K" thermocouple monitors the internal generator temperature. As the heat continues to increase, so does the thermocouple's DC millivolts.

Once the generator's temperature approaches the setpoint temperature, the Control Board begins to pulse the VDC to the Solid State Relay. The generator's VAC and AMPS will also pulse during this point. When the generator's temperature is between the recommended setpoints of 375 - 400° F (190 - 204° C), the thermocouple generates approximately 7.5 - 8.5 DC millivolts. The Control Board receives these millivolts and proceeds to remove the 3-5 VDC to the Solid State Relay since the heating circuit has now become satisfied.

Then, the Solid State Relay terminals 1 and 2 open up, and the generator stops heating. The heating circuit cycles on and off as needed, even at idle.

When the Single Shot button is pushed, it signals the Control Board to initiate a single shot of steam. The Control Board then supplies 24 VAC to the Solenoid Valve for a split second. The Solenoid Valve opens and allows approximately 3/4 - 1 ounce (4 to 5 tablespoons) of water to be disbursed onto the generator surface for steaming. The water is immediately converted into steam, which is forced up through the black Manifold Orifices to steam the product within the baskets.

Each of the four channel buttons can be custom programmed for cycle time, time between when each steam shot occurs, and water volume used per each shot (See the Programming section of this manual). An audio signal will sound for three seconds at the end of the cycle.

Two safety devices are incorporated into the VS-350:

- Hi-Limit Thermostat
- Pressure Relief Plunger

If the heating circuit continues to call for heat and the generator overheats, a manual resettable Hi-Limit Thermostat will trip and open the generator circuit.

If water and or steam pressure builds up beneath the black Manifold Plate (due to restricted Manifold Plate orifices), a Pressure Relief Plunger will elevate and vent the steam pressure above the manifold plate.

NOTE: If any of these conditions should arise, the root cause must be determined and corrected. See the Maintenance section of this manual for further details.

NOTE: All direct water fed units require a Water Pressure Regulator. It should be set to 20-25 psi (1.4-1.7 kg/cm² or 138-172 kPa). Failure to install a Water Pressure Regulator will result in poor steaming and flooding of the steam generator.

TROUBLESHOOTING

⚠ WARNING ⚠


To avoid possible personal injury and/or damage to the unit, inspection, test and repair of electrical equipment should be performed by qualified service personnel. The unit should be unplugged when servicing, except when electrical tests are required.

| Problem | Possible Cause | Corrective Action |
|--|---|--|
| Rocker Switch (power On/Off) is turned on but the Switch Indicator Light is still off and the Control Panel is blank | Power Cord not correctly plugged in. | Plug in the power cord correctly. |
| | The power cord and/or electrical plug is damaged. | Inspect electrical wire, plug, and receptacle. |
| | The main electrical panel circuit breaker is off or has been tripped. | Reset circuit breaker. Contact your maintenance person or Authorized Service Agency if it trips again. |
| | Rocker Switch is inoperable. | Contact your maintenance person or Authorized Service Agency for service. |
| The unit's main electrical panel circuit breaker trips. | Damaged receptacle, plug, or cord; a loose connection or an internal component failure. | Turn the unit off, allow it to cool to room temperature, and then restart the unit. |
| Power On/Off switch and indicator are on but the display is blank. | Control Board is inoperable. | Contact your maintenance person or Authorized Service Agency for service. |
| | Transformer is inoperable. | |
| | Loose or burnt wiring in heating circuit. | |
| Power On/Off switch is turned on, the switch indicator light is on, the control panel display is on, but the unit is not heating up. | Heat Relay is inoperable. | Reset the Hi-Limit Thermostat according to the Operations section of this manual. If the Hi-Limit Thermostat requires continuous resetting, contact your maintenance person or Authorized Service Agency for service. |
| | Hi-Limit Thermostat is tripped. | |
| | Thermocouple is inoperable. | |
| | Control Board is inoperable. | |
| | Steam Generator is inoperable. | |
| | Loose or burnt wiring in heating circuit. | |
| Unit heats but there is little or no steam produced and/or The product requires more steaming than usual. | Water Line Valve is closed. | Check that the Water Line Valve is open. |
| | Filter Strainer is restricted. | Check and clean the Filter Strainer as described in the Maintenance section of this manual. |
| | Quick Disconnect is not fully engaged at rear of the unit or is damaged. | Remove and reengage the Quick Disconnect firmly until a "click" is heard. Replace if damaged. |
| | Low or no water pressure in water line. | Remove the Quick Disconnect Insert from the rear of the unit. While holding into an empty cup, press the white plastic tip. Strong steady water flow should be noted. If so, re-engage firmly into unit. If not present, or pressure is low, contact your maintenance person or plumber. |
| | Spray Tube is restricted. | Remove and clean Spray Tube as described in the Maintenance section of this manual. |
| | Black Manifold orifices are restricted. | Remove and clean the Black Manifold as described in the Maintenance section of this manual. |
| | Unit is not being cleaned daily or properly. | Clean unit daily as described in the Maintenance section of this manual. |
| | | |


TROUBLESHOOTING (continued)

| Problem | Possible Cause | Corrective Action |
|---|---|---|
| Unit heats but there is little or no steam produced and/or The product requires more steaming than usual (continued). | Improper water pressure to unit. | Verify that a water pressure regulator is installed and set to 20 - 25 psi. |
| | Insufficient or excessive calcium/mineral buildup on Generator surface. | Verify that a thin layer of deposits is present on the Generator surface. Refer to the Maintenance section of this manual. |
| | Channels, or Rate and Shot values were programmed improperly. | Restore programming to original values as described in the Programming section of this manual and then reprogram as needed. |
| | Black Manifold O-ring is damaged or missing. | Install Manifold O-ring if missing. Replace if it is damaged. |
| | Low Generator setpoint temperature. | Verify the setpoint temperature is 375° F (190° C) to 400° F (204° C). |
| Steam leaks out of the sides of the black Manifold Plate. | Black Manifold O-ring is damaged or missing. | Install Manifold O-ring if missing. Replace if it is damaged. |
| Black Manifold is difficult to lock and unlock onto the generator with the sliding lever. | Black Manifold not being removed and cleaned daily as required. | Remove and clean the Black Manifold daily as described in the Maintenance section of this manual. |
| | Black Manifold O-Ring is damaged or worn. | Replace Black Manifold O-Ring if damaged or worn. |
| | Black Manifold O-ring is not being lubricated daily with Petro gel. | Lubricate the Black Manifold O-ring daily as described in the Maintenance section of this manual. |
| | Generator is dirty. | Clean or delime the Generator. See the Maintenance section of this manual for more information. |
| Unit floods overnight and/or continues to steam even when in idle mode. | Solenoid valve is being held open by debris from the building's water line piping due to no pre-strainer/filter on the water line just before the unit. | Attempt to flush the debris out of the valve by rapidly operating the unit on a number of "Single Shot" cycles and then letting the unit rest. If the unit still leaks, contact your maintenance person or Authorized Service Agency. |
| Unit is whistling during use. | Unit is not being cleaned Daily and/or properly. | See the Maintenance section of this manual. |

WIRING DIAGRAM

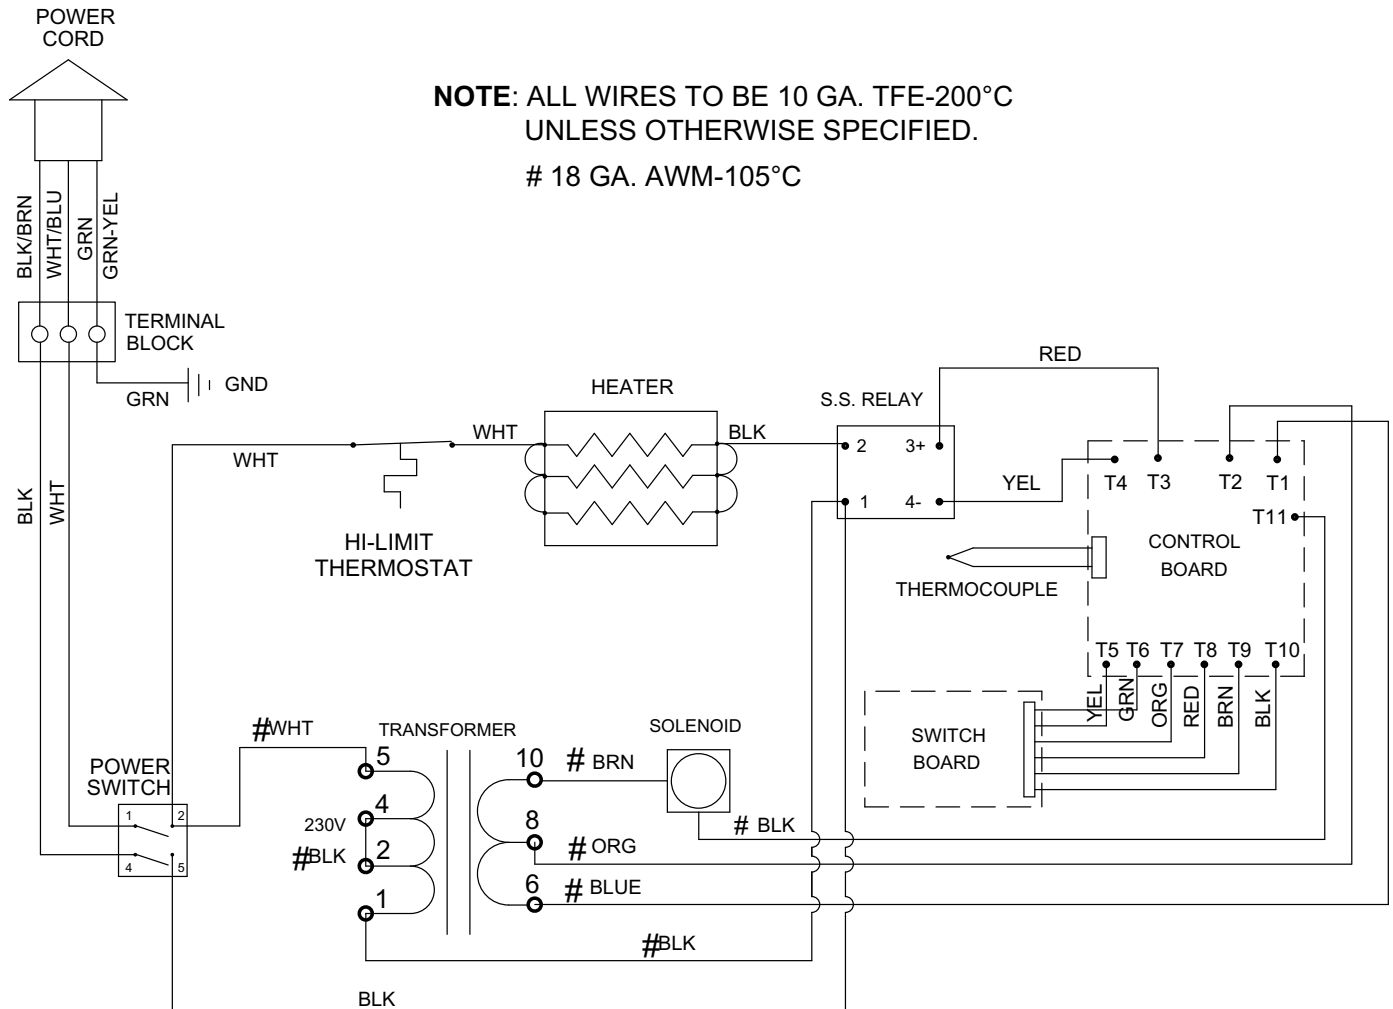

REPLACEMENT PARTS

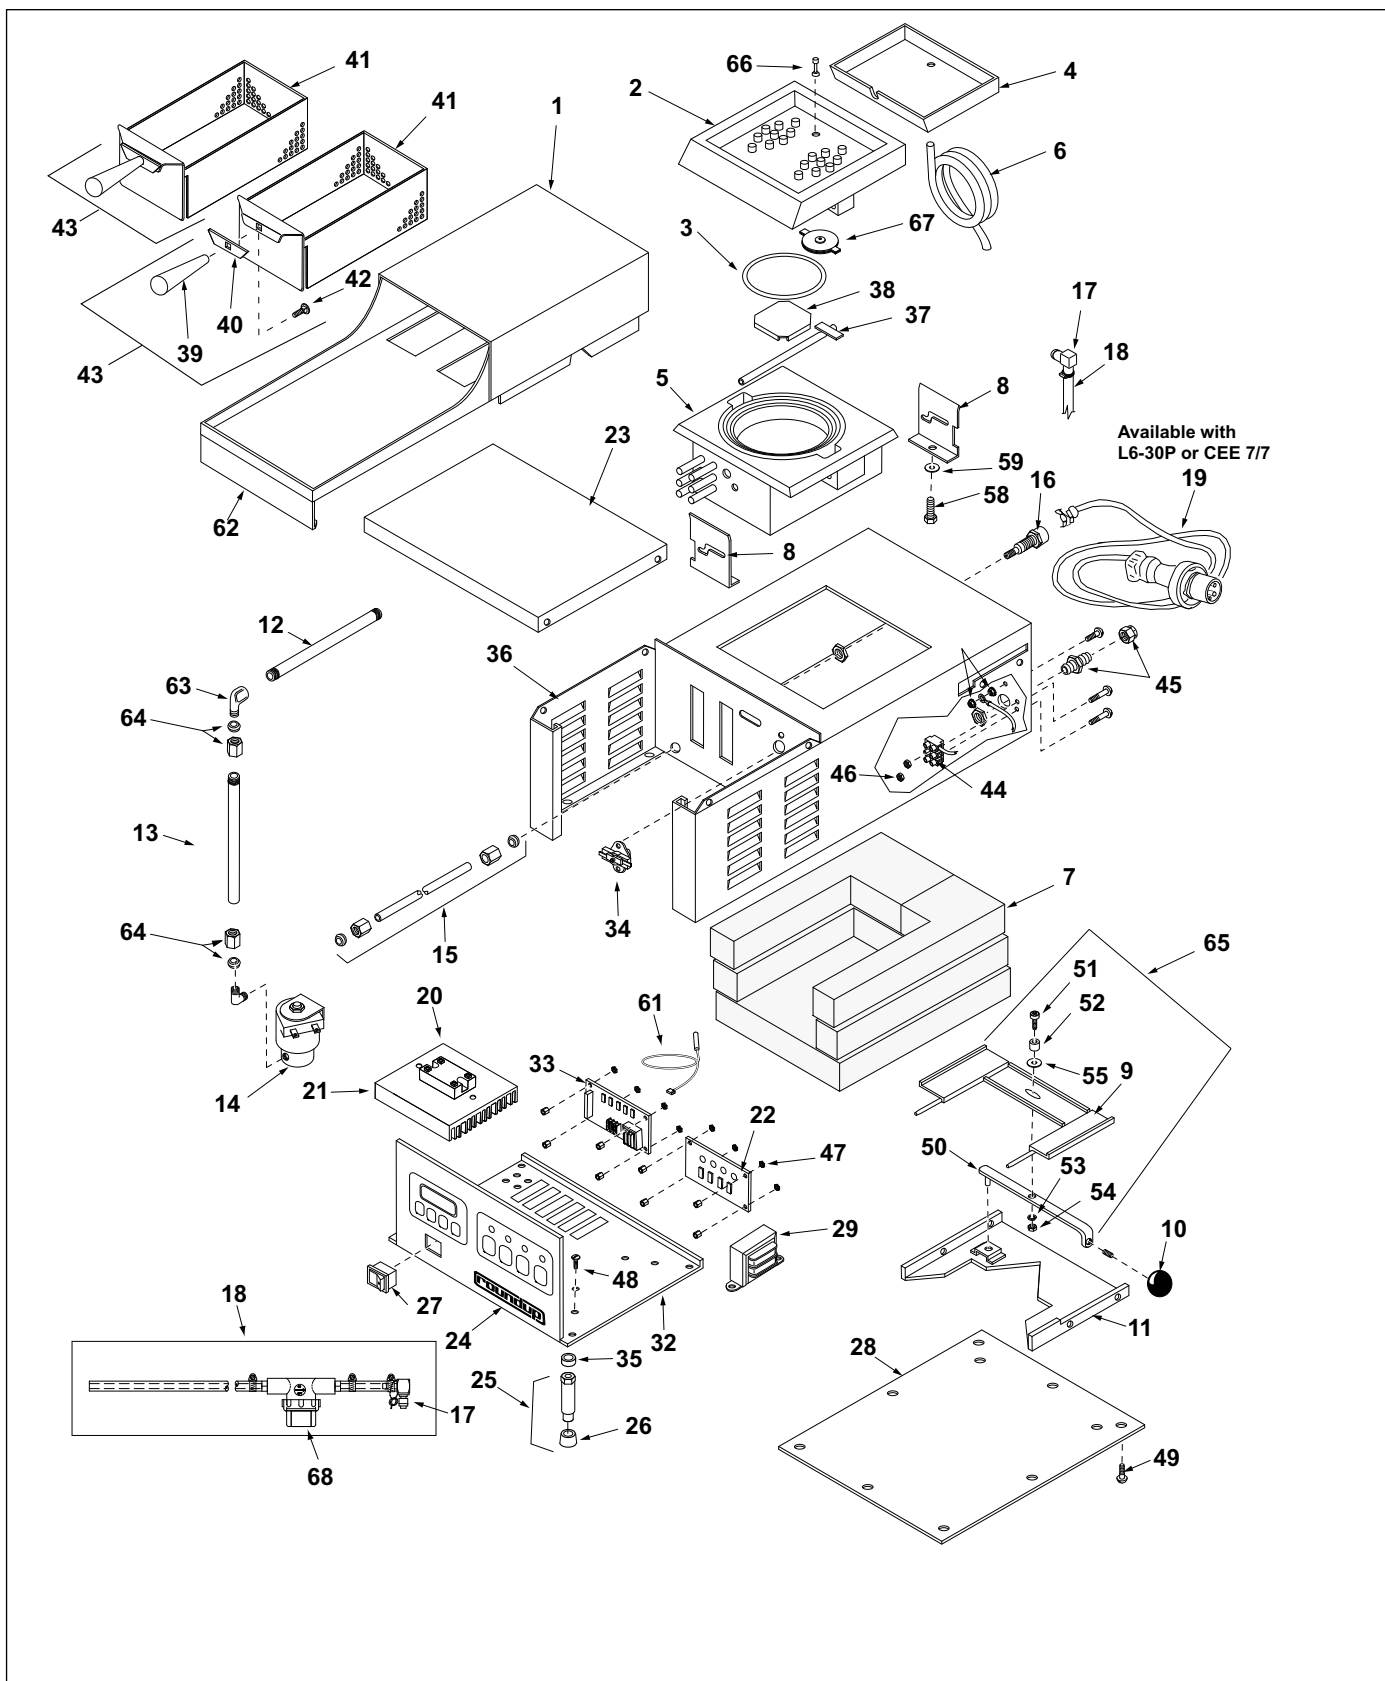

REPLACEMENT PARTS (continued)

| Item | Part No. | Description | Qty. | Item | Part No. | Description | Qty. |
|------|----------|--|------|------|----------|---|------|
| 1 | 0011539 | Top Housing Assy. (Jumbo) | 1 | | | **(See NOTE below) | |
| 2 | 7000404 | Generator Manifold (incl. #66 & 67) | 1 | 35 | 2120171 | Front Leg Spacer | 2 |
| 3 | 0200187 | O-Ring | 1 | 36 | 0021041 | Main Housing | 1 |
| 4 | 0020947 | Drip Tray Assy. | 1 | 37 | 0020958 | Spray Tube | 1 |
| 5 | 7000293 | Generator, (208V) 5000w | 1 | 38 | 0502669 | Diffuser | 1 |
| | 7000295 | Generator, (230V) 5000w | | 39 | 2100119 | Handle | 2 |
| | 7000375 | Generator (230V) 3500w (for MFG # 9100720 only) | | 40 | 2100240 | Handle Guard, Black | 2 |
| 6 | 2020104 | Drain Tube | 1 | 41 | 0503851 | Basket | 2 |
| 7 | 7000297 | Insulation | 1 | 42 | 338P102 | Bolt, Square Neck, 3/8-16 x 3/4" SS | 2 |
| 8 | 0501139 | Retainer, Generator | 2 | 43 | 0011502 | Large Basket Assy. (Jumbo) (Incl. 39, 40, 41 & 42) | 2 |
| 9 | 0021040 | Channel, Lock Lever Support | 1 | 44 | 406K006 | Terminal Block, 3-Pole | 1 |
| 10 | 2100138 | Ball Knob | 1 | 45 | 0400315 | Strain Relief | 1 |
| 11 | 0021038 | Lever Support | 1 | 46 | 308P143* | Nut, Hex, KEPS, #8-32 | 1 |
| 12 | 2190102 | Teflon Tube | 1 | 47 | 304P105* | Nut, Hex, KEPS, #4-20, Zinc | 1 |
| 13 | 2000214 | Tube SS 1/4" | 1 | 48 | 310P120* | Screw, Machine, #10-32 x 5/8" | 1 |
| 14 | 4040145 | Solenoid | 1 | 49 | 308P103* | Screw, Machine, #8-32 x 1/4" | 1 |
| 15 | 200K127 | Inlet Tube Kit | 1 | 50 | 0021039 | Lock Lever Weldment | |
| 16 | 208K106 | Quick Disconnect Body | 1 | 51 | 325P169 | Bolt, Shoulder, 5/16 x 1/2" | 1 |
| 17 | 7000139 | Quick Disconnect Insert | 1 | 52 | 212P120 | Spacer, .437" O.D. x .340 I.D. | 1 |
| 18 | 0010584 | Inlet Hose Assy. (incl. #17 & 68) | 1 | 53 | 325P154 | Washer, Helical Spring Lock, 1/4" | 1 |
| 19 | 0700479 | Power Cord (L6-30P) Mfg. No. 9100700 | 1 | 54 | 325P102 | Nut, Hex, 1/4-20 | 1 |
| | 0700453 | Power Cord (CEE 7/7 plug) Mfg. No. 9100720 | | 55 | 212P118 | Washer, Flat, SS | 1 |
| | 0700588 | Power Cord (IEC-309 plug) Mfg. No. 9100710 | | 58 | 325P109* | Bolt, Hex Hd., 1/4-20 x 1/2" | 1 |
| 20 | 7000403 | Solid State Relay Kit (Incl. #21) | 1 | 59 | 325P104* | Washer, Flat, 1/4" | 1 |
| 21 | 4050232 | Heat Sink | 1 | 61 | 4050214 | Type "K" Thermocouple | 1 |
| 22 | 4010192 | Board, Switch PC | 1 | 62 | 1001053 | Cleaning Label | 1 |
| 23 | 0503776 | Cover, Main Housing | 1 | 63 | 204P114* | Female Elbow 1/4" Tube | 1 |
| 24 | 1001058 | Label, Control Panel | 1 | 64 | 2040126 | Nut & Sleeve Assy. 1/4" | 2 |
| 25 | 0011370 | 2" Leg (Incl. No. 26) | 4 | 65 | 0011071 | Lock Lever Assy. (Incl. 9, 50, 51, 52, 53, 54, & 55) | 1 |
| 26 | 2100109 | Rubber Foot, Leg | 4 | 66 | 2170115 | Plunger Valve | 1 |
| 27 | 4010137 | Rocker Switch, Power On/Off | 1 | 67 | 0021474 | Plunger Weldment | 1 |
| 28 | 0020946 | Panel, Bottom | 1 | 68 | | See page 16 for Strainer Parts identification. | 1 |
| 29 | 7000319 | Transformer, 115/230V-24V | 1 | | | * Only available in packages of 10. | |
| 30 | 0700591 | Wire Set (not shown) | 1 | | | ** NOTE: VS-350 units manufactured with serial numbers 0210XXXX and prior were manufactured with an external manual resettable capillary bulb Hi-Limit Thermostat. If this type of Hi-Limit Thermostat should require replacement, it must be replaced with a bi-metal type (P/N 7000344) and retrofitted into unit. | |
| 31 | 2140116 | Petrol Gel (not shown) | 1 | | | | |
| 32 | 0021244 | Control Panel | 1 | | | | |
| 33 | 7000294 | Control Board | 1 | | | | |
| 34 | 7000344 | Hi-limit Thermostat Kit | 1 | | | | |

LIMITED WARRANTY

Equipment manufactured by Roundup Food Equipment Division of A.J. Antunes & Co. has been constructed of the finest materials available and manufactured to high quality standards. These units are warranted to be free from mechanical and electrical defects for a period of one year from date of purchase or 18 months from shipment from factory, whichever occurs first, under normal use and service, and when installed in accordance with manufacturer's recommendations.

To insure continued proper operation of the units, follow the maintenance procedure outlined in the Owner's Manual.

1. This warranty does not cover cost of installation, defects caused by improper storage or handling prior to placing of the Equipment. This warranty does not include overtime charges or work done by unauthorized service agencies or personnel. This warranty does not cover normal maintenance, calibration, or regular adjustments as specified in operating and maintenance instructions of this manual, and/or labor involved in moving adjacent objects to gain access to the Equipment. This warranty does not cover consumable items such as gaskets, O-rings, and light bulbs. Nor does it cover water contaminant problems such as foreign material in water lines or inside solenoid valves. It does not cover water pressure problems or failures resulting from improper/incorrect voltage supply. **This warranty does not pay travel, mileage, or any other charges for an authorized service agency to reach the equipment location.**
2. Roundup reserves the right to make changes in design or add any improvements on any product. The right is always reserved to modify equipment because of factors beyond our control and government regulations. Changes to update equipment do not constitute a warranty charge.
3. **If shipment is damaged in transit, the purchaser should make a claim directly upon the carrier. Careful inspection should be made of the shipment as soon as it arrives and visible damage should be noted upon the carrier's receipt. Damage should be reported to the carrier. This damage is not covered under this warranty.**
4. Warranty charges do not include freight or foreign, excise, municipal or other sales or use taxes. All such freight and taxes are the responsibility of the purchaser.
5. THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, EACH OF WHICH IS HEREBY EXPRESSLY DISCLAIMED. THE REMEDIES DESCRIBED ABOVE ARE EXCLUSIVE AND IN NO EVENT SHALL ROUNDUP BE LIABLE FOR SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR THE BREACH OR DELAY IN PERFORMANCE OF THIS WARRANTY.



A.J. Antunes & Co.

A.J. Antunes & Co.
Headquarters/Manufacturing
180 Kehoe Boulevard
Carol Stream, Illinois 60188 USA
Phone (630) 784-1000
Toll Free (800) 253-2991
Fax: (630) 784-1650

Antunes Equipment
Manufacturing (Suzhou) Ltd.,
9 Hou Ju Road, Building #24,
S&T Park, SND
Suzhou, Jiangsu, China 215011
Phone: 86-512-6841-3637
Fax: 86-512-6841-3907

www.ajantunes.com